

# Fitting Guidelines



## Land Rover Defender 7" LED Headlamp

S7096LED  
UK Chrome

S7097LED  
UK Black

S7098LED  
Euro Chrome

S7099LED  
Euro Black



1 Remove indicator & sidelight along with plastic headlamp surround.



2 Remove headlamp & bowl. (4 screws).




3 Once removed, unscrew bezel, remove headlamp & disconnect H4 plug.



4 Fit new Wipac LED headlamp to retaining bezel. Refit to vehicle using existing or new bowl/bezel.



5 Insert bezel into the 2 adjuster screw slots & fix headlamp to bowl using bottom screw (image shows half body).

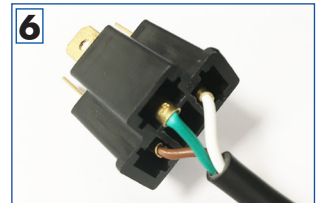

6 Insert wires into headlamp plug. Brown = Left: Main Beam. Green = Top: Dipped. White = Right: Earth.



7 Plug headlamp connector into the Defender's loom. Test connection.



8 Connect halo wires into sidelight with scotch blocks or crimps\*. Red = Live, Black = Earth. Test connection.



9 Finally, refit the headlamp by following instructions 2 & 1 in reverse.

\*Alternatively, to create DRL function, splice directly into ignition live. **Note:** Not E Marked or road legal for this function.

Wipac does not accept any liability for incorrect fitment. It is advised that any modifications are carried out by a qualified mechanic.